
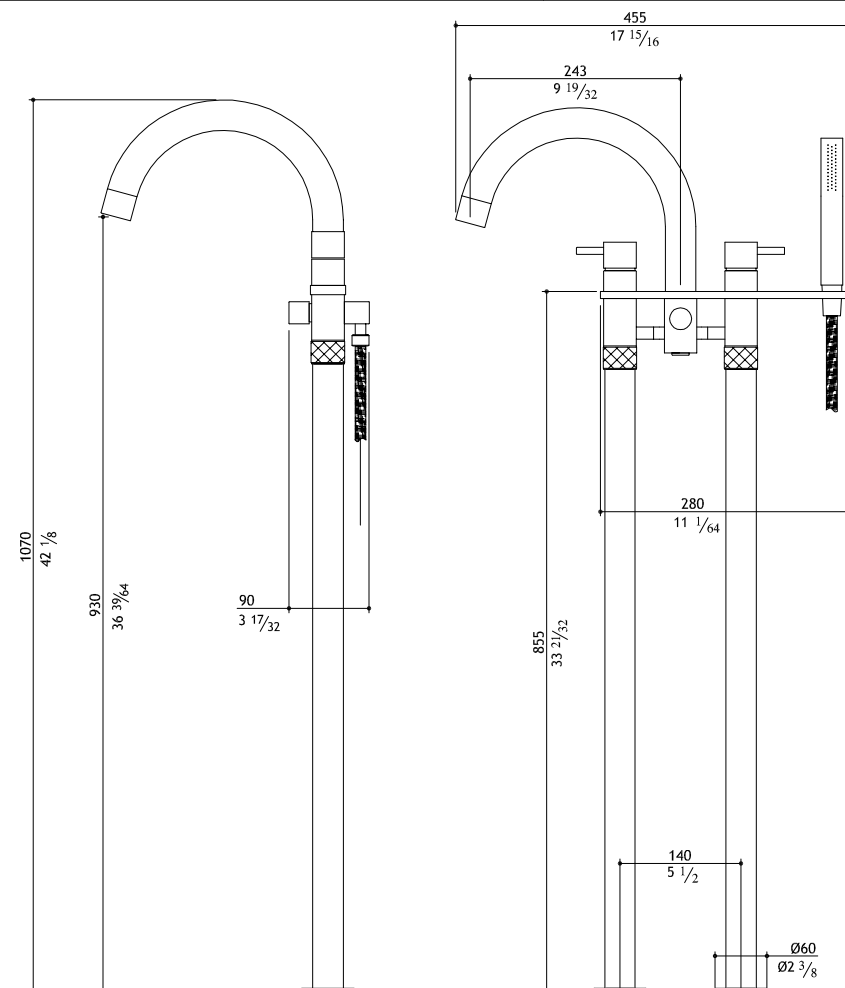




INDICAZIONI PER L' INCASSO A PAVIMENTO
FLOOR INSTALLATION INFO

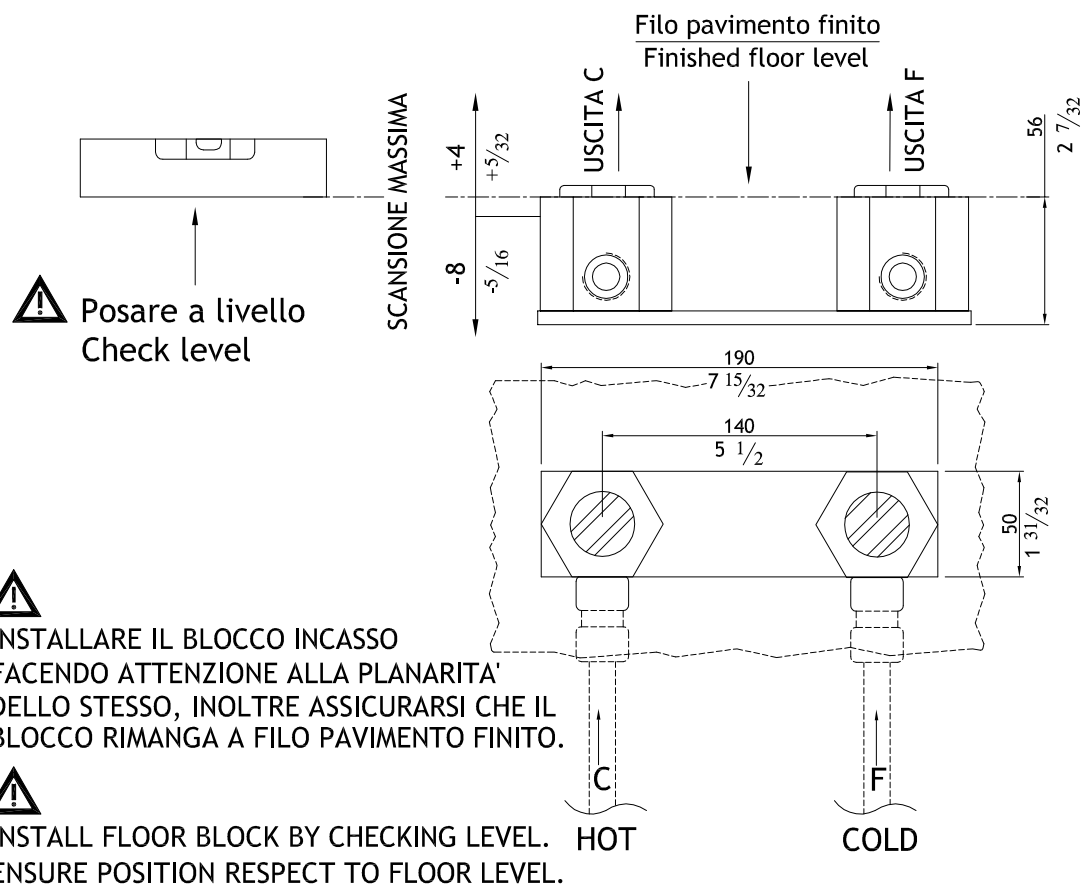


MGS Progetti srl

Corso Milano, 189 - 28883 Gravellona Toce (VB) - Italy

www.mgsprogetti.com - E-mail: info@mgsprogetti.com - Tel.: +39 0323 865218 - Fax: +39 0323 865215

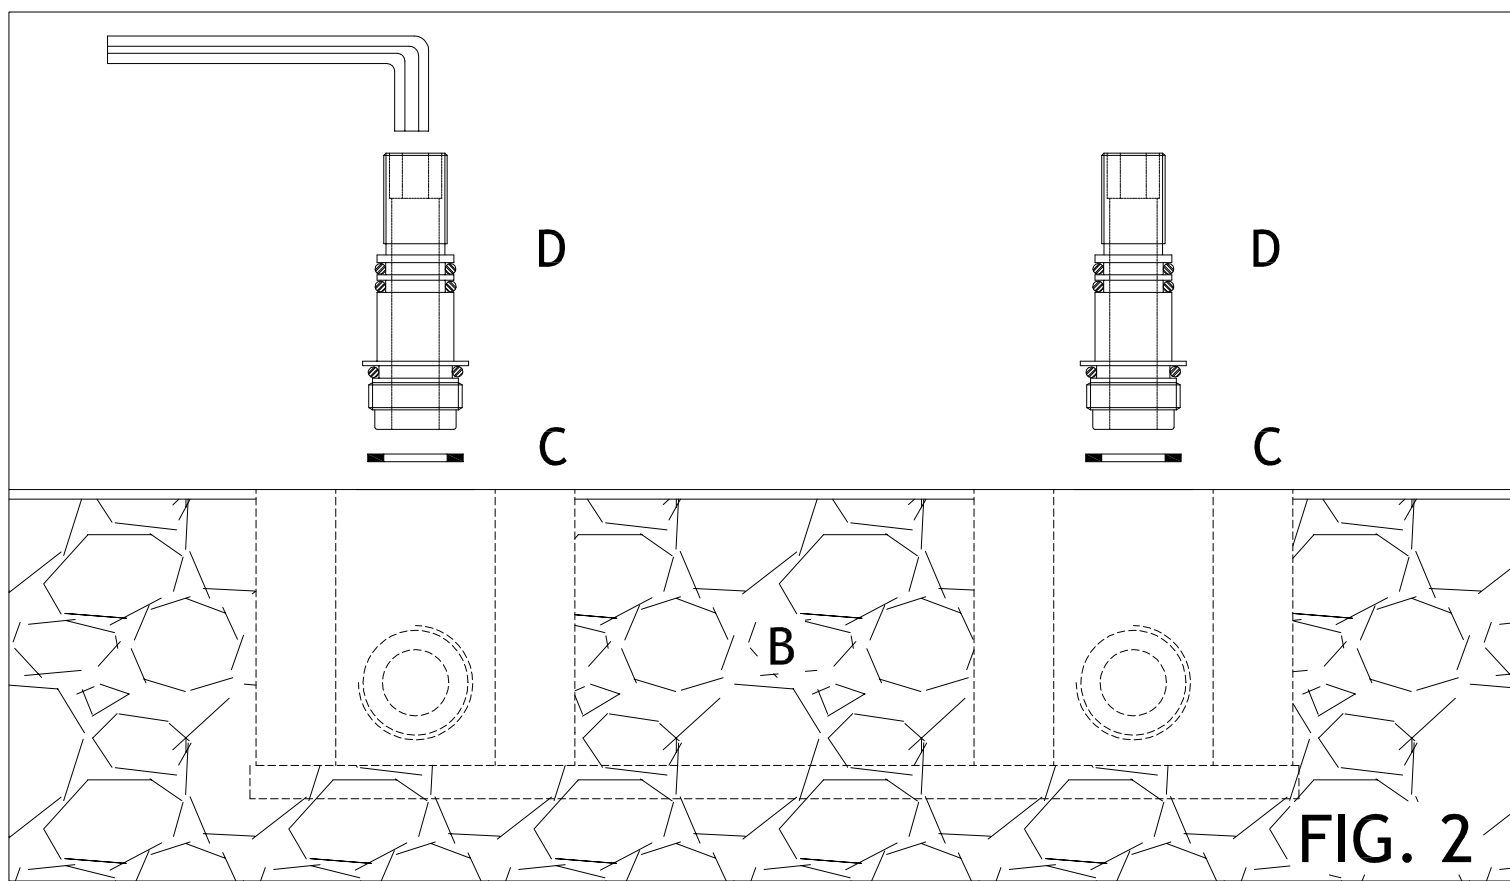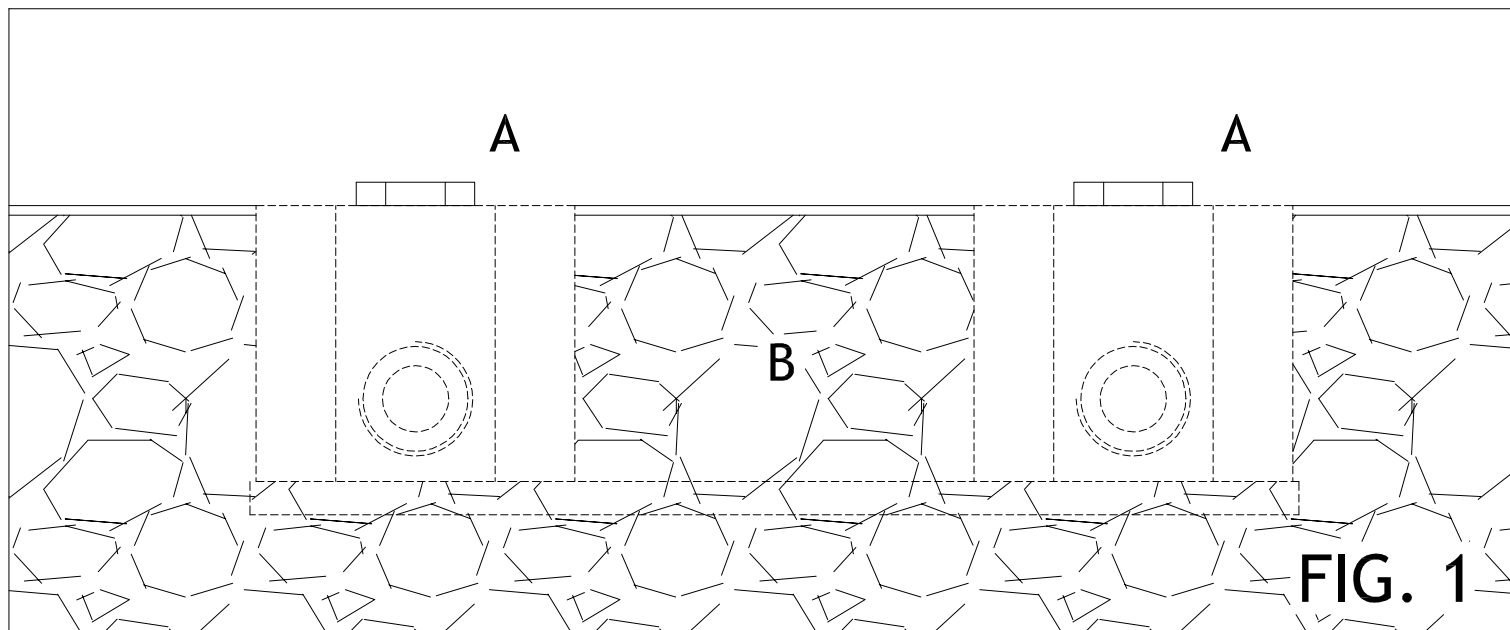

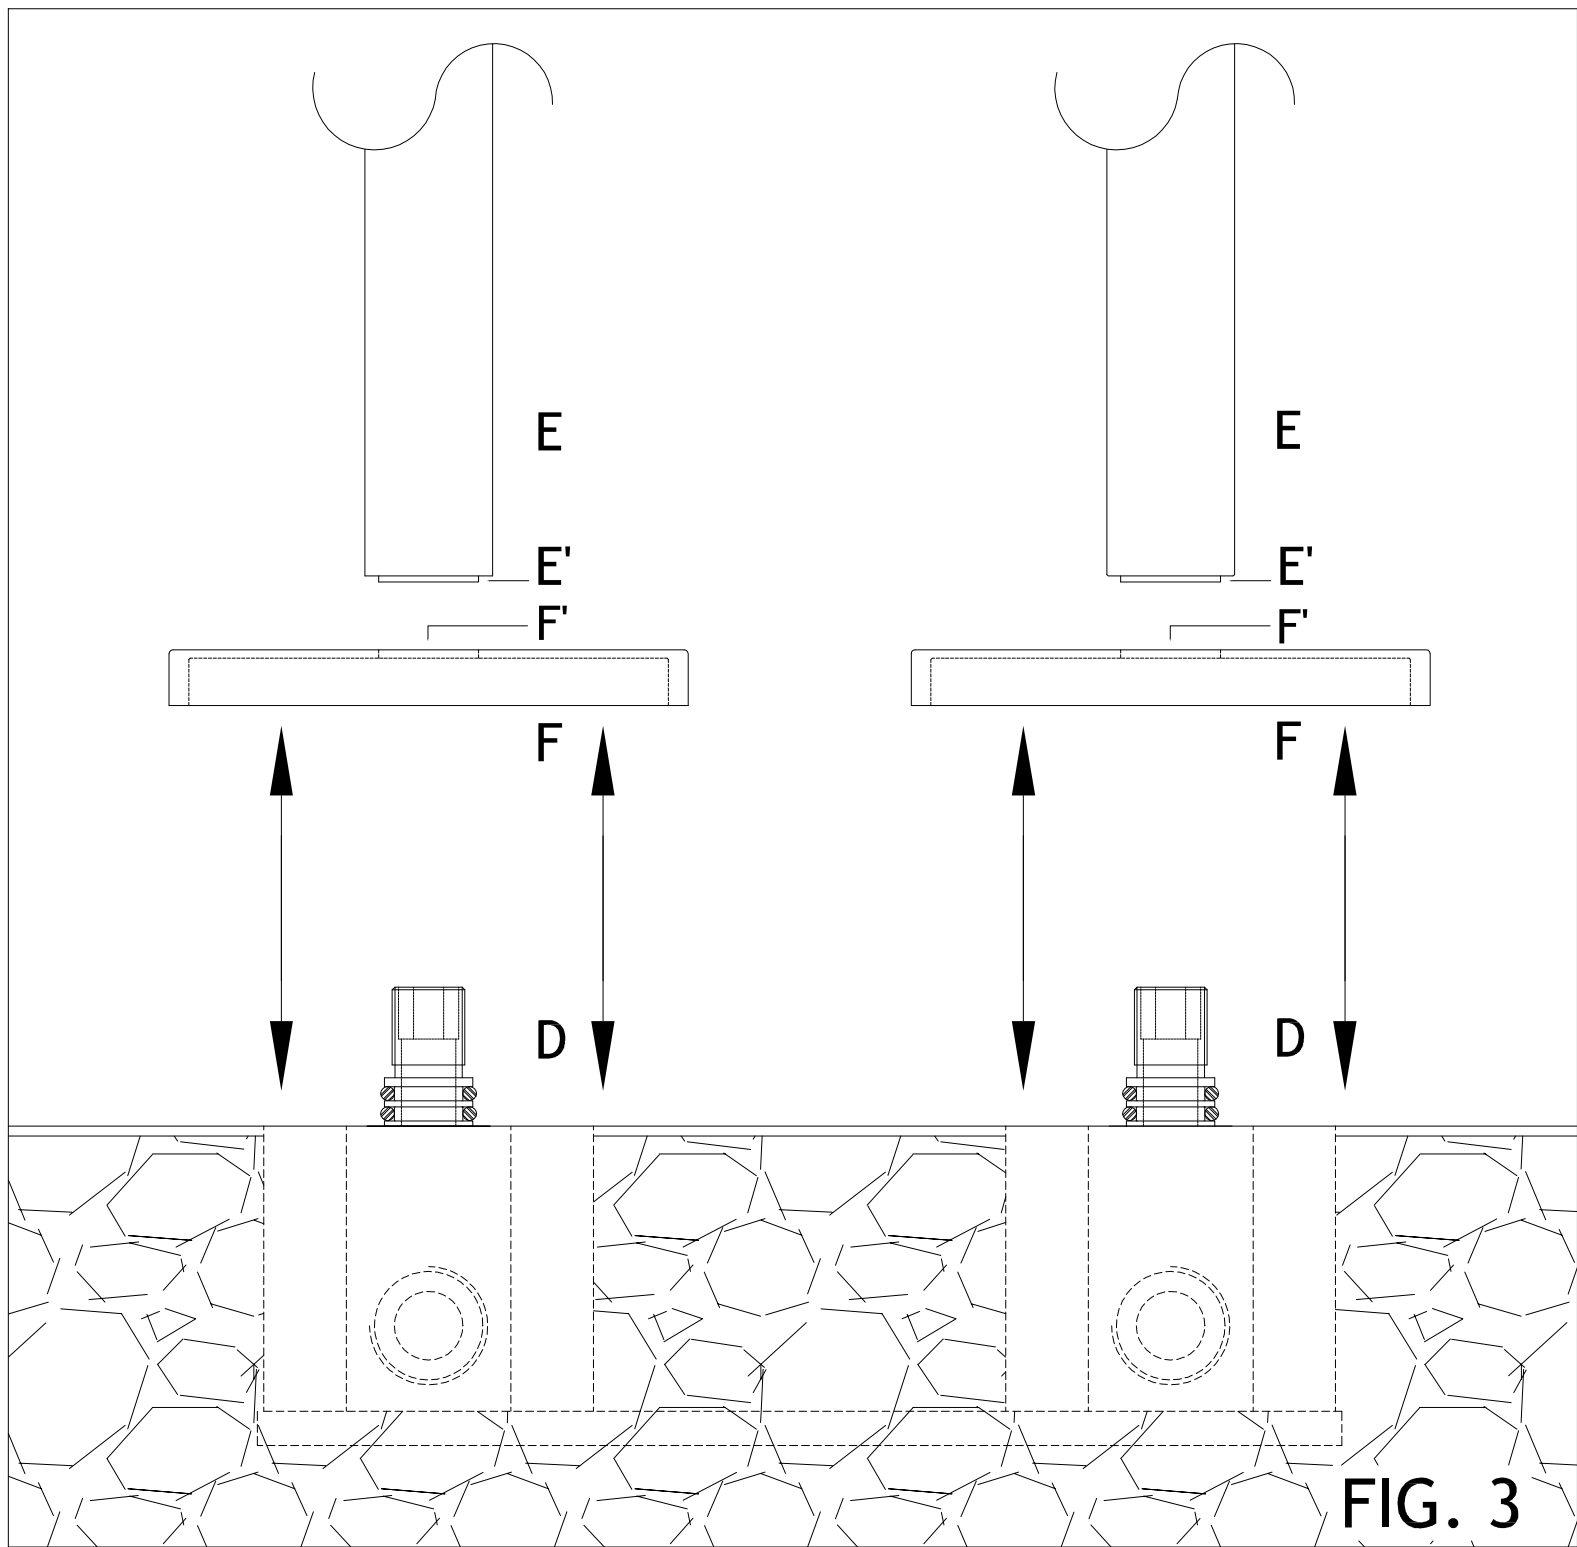

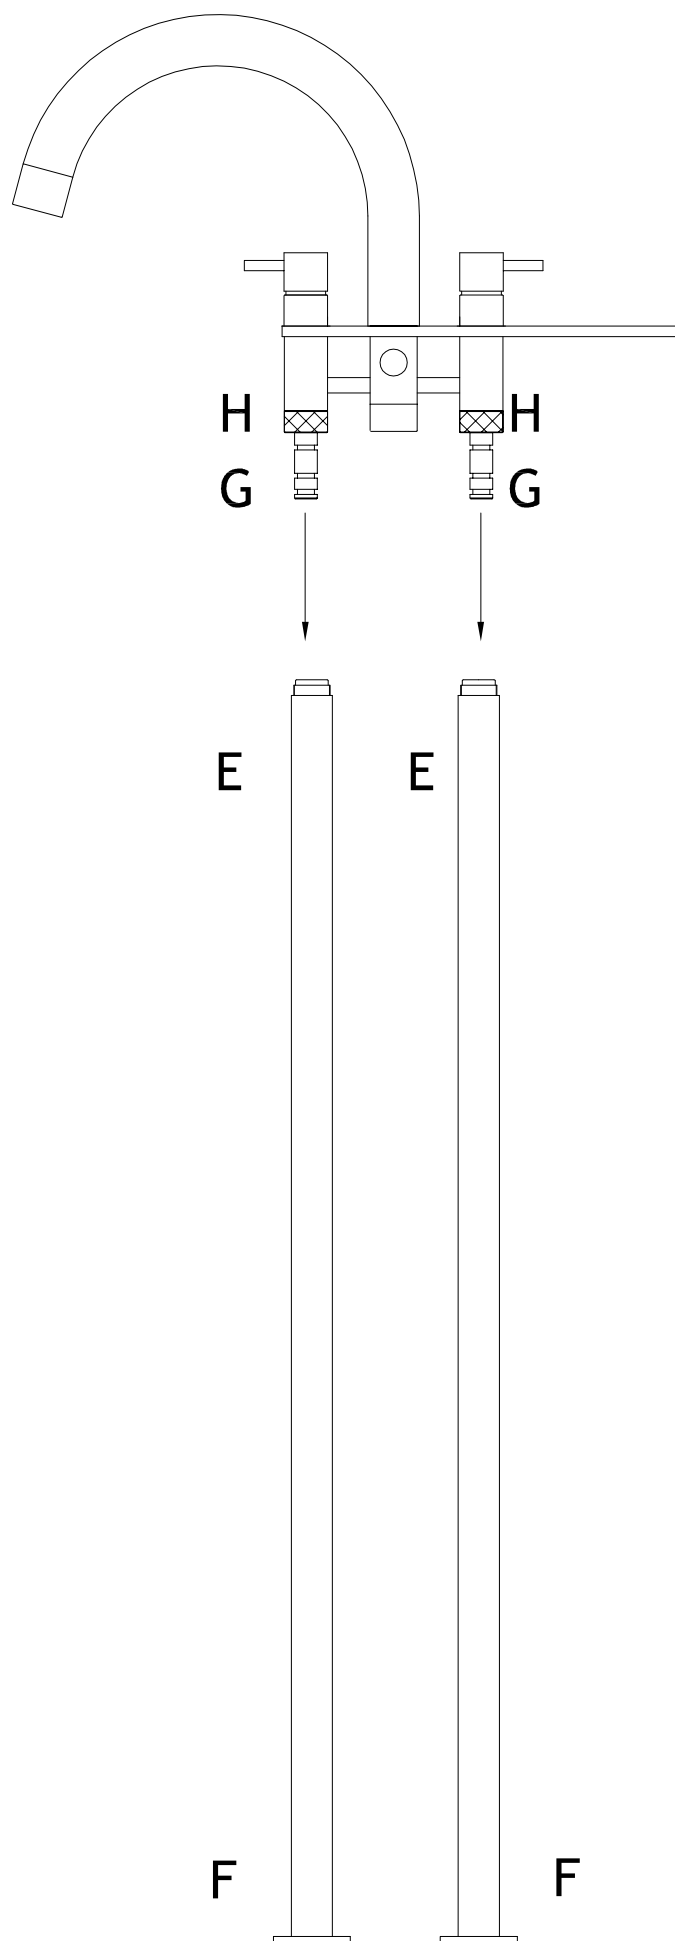


FIG. 4

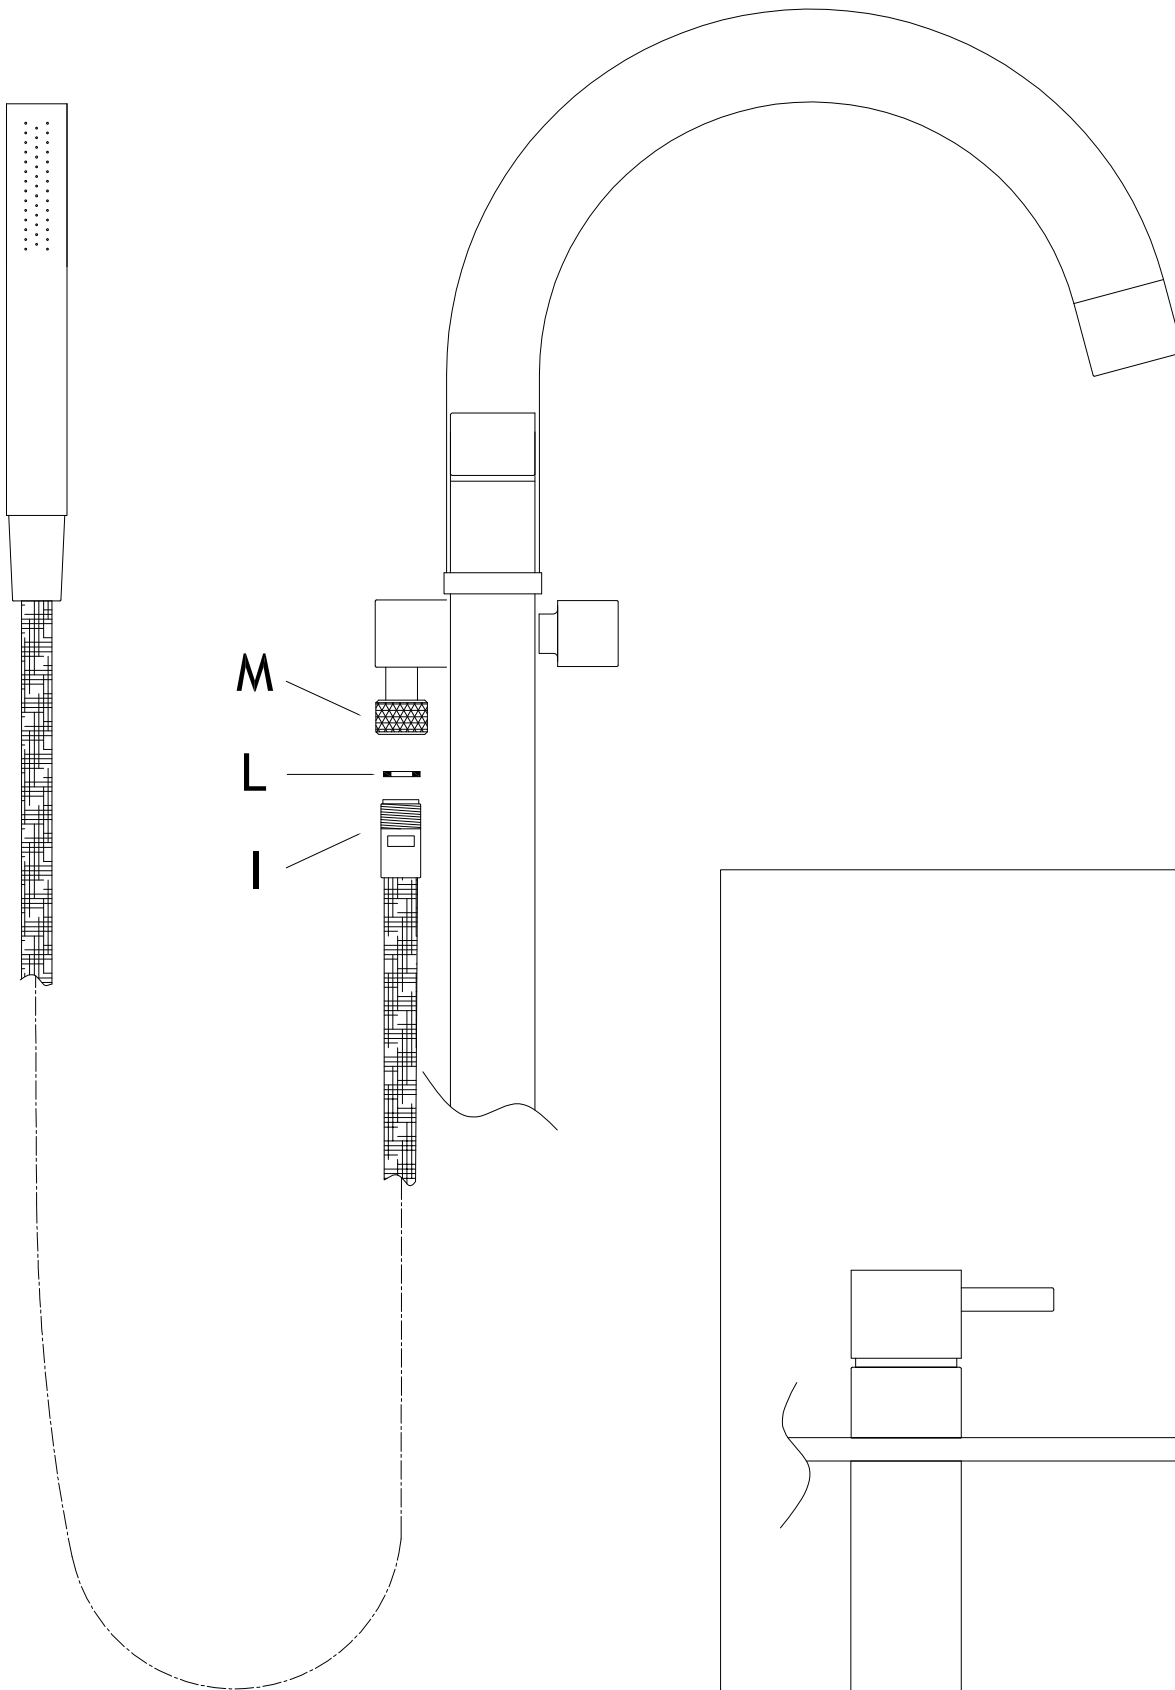


FIG. 5

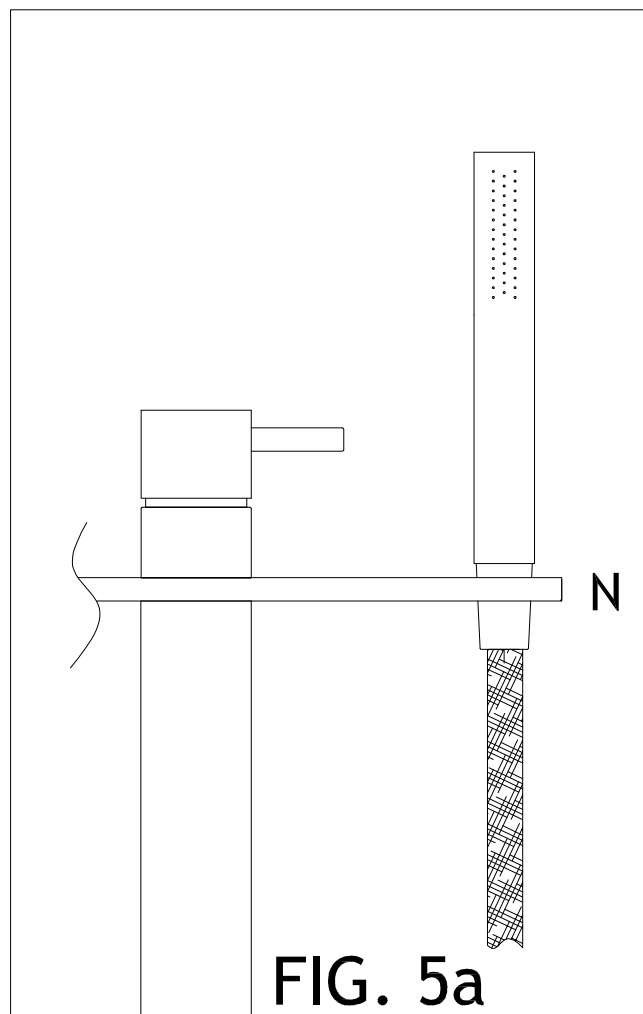


FIG. 5a

ASSEMBLY INSTRUCTIONS - BATH MIXER COLUMN MB507

Remove various parts from the carton with extreme care.

(FIG 1)

- Unscrew and remove protection lids (A) with all gaskets.

(FIG 2)

- Insert enclosed gaskets (C).
- Tighten nozzles (D) with hexagonal key N° 10.

(FIG 3)

- Check that nozzles (D) are tight.
- Push rings (F) onto columns (E) so that (E') matches (F').
- Screw columns (E) onto nozzles (D) and tighten.
- Push rings (F) into position at the base of columns (E).

ASSEMBLY OF CONTROL UNIT

(FIG 4)

- Insert nozzles (G) into columns (E) taking care of not damaging O-ring gaskets.
- Fully tighten rings (H).

CONNECTION OF HAND SHOWER

(FIG 5)

- Screw knurled nut (M) to flexible hose (I) taking care that gasket (L) is in position.
- Place hand shower on console (N) (FIG 5a).